

Your Handle Type:

Schlage Dexter Active



1

Use a pin to release the door handle.



2

Remove the door handle.



3

Pull out the thumb turn lock and slip the lock extension onto the shaft.



4

Slide on the extension until the clip fits in the slot. Then hold the extension straight and tighten the set screw.



5

Push the thumb turn onto the lock extension. Tighten the set screw until it is flush. Make sure the thumb turn can still turn. If needed, back out the screw.



6

Slide on the door handle until it clicks. You may need to press hard.