


Your Handle Type:

# Hoppe

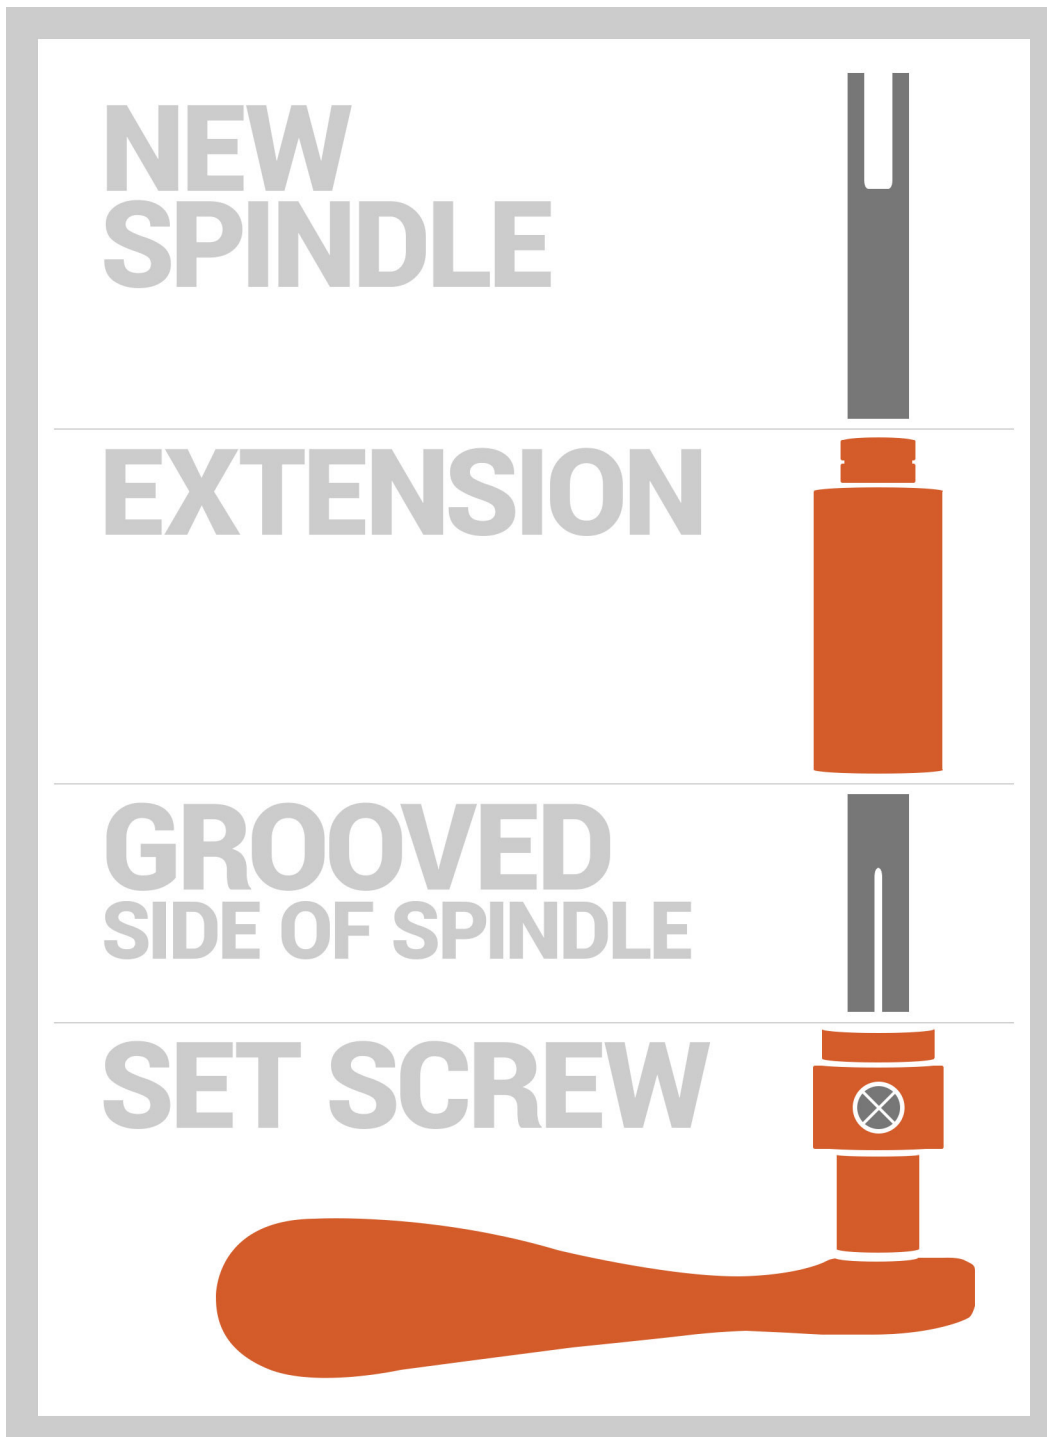

- 1** Loosen the set screw on the **inside** door handle. Pull off the handle and save the nylon washer. Pull off the outside door handle with the spindle attached.
- 2** Loosen the **outside** handle set screw. Remove the handle. Note how far the spindle goes into it. Insert the **new spindle** at the same distance, making sure the grooved side faces the set screw.
- 3** Install the outside handle with the new spindle into the door. Place the saved nylon washer on the new spindle.
- 4** Install the extension, followed by the **inside handle**. The grooved side of the new spindle should line up with the set screw.
- 5** Push both inside and outside handles together and tighten the set screw. Make sure the handles can turn freely but not loosely.