


Your Handle Type:

Hoppe

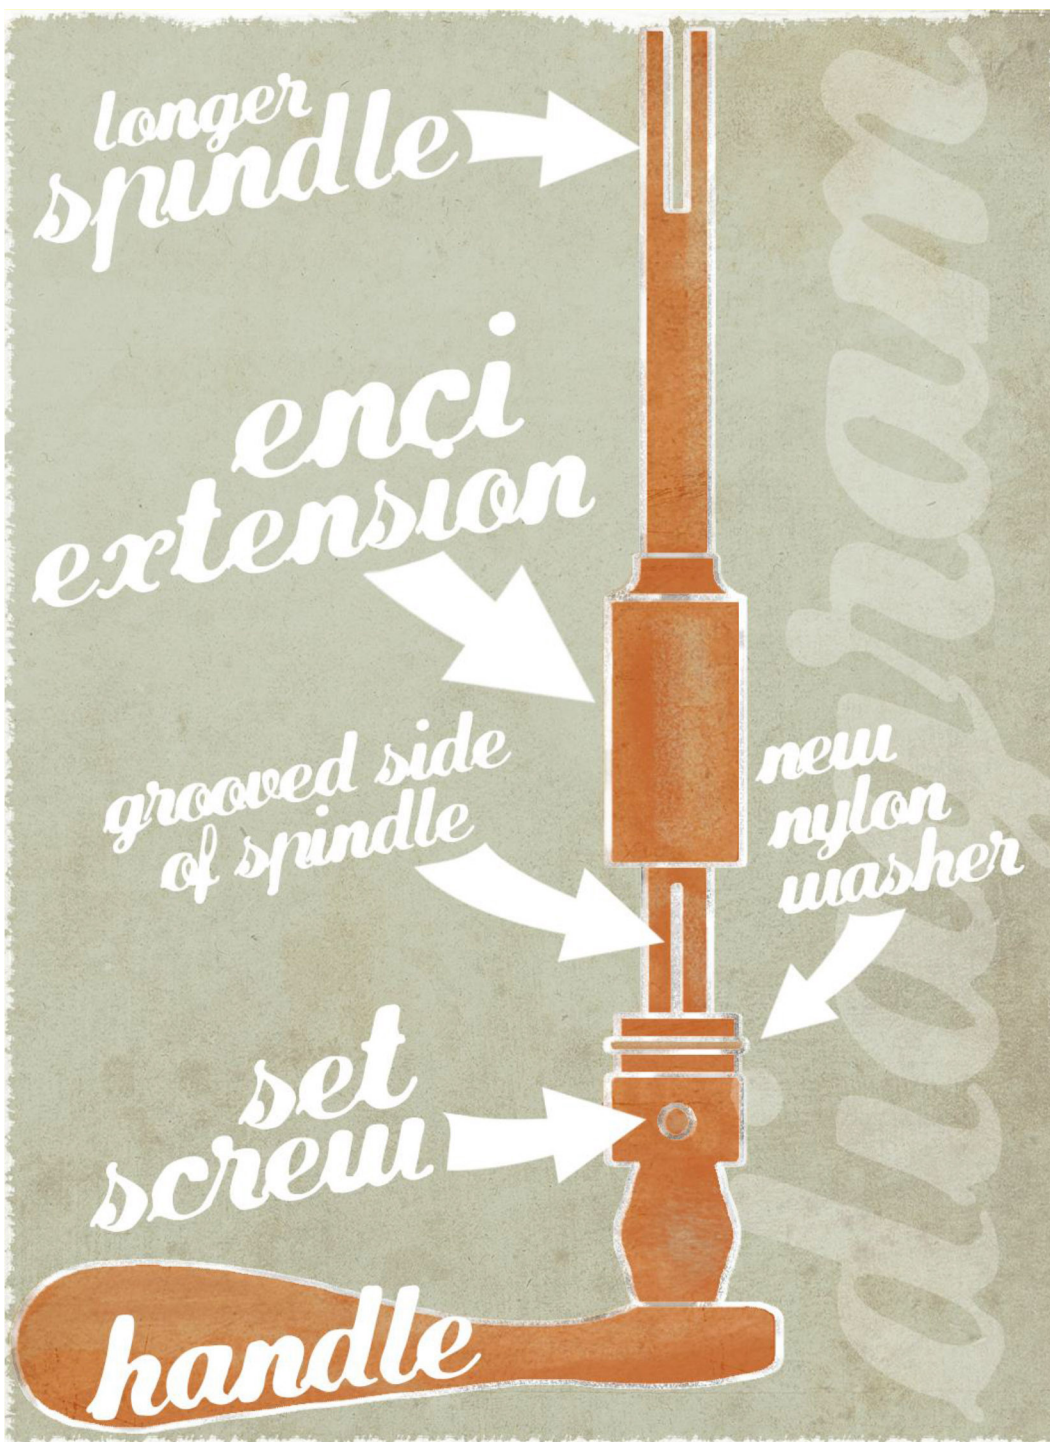

1 Loosen the set screw on the **inside** door handle. Pull off the handle and save the nylon washer. Pull off the outside door handle with the spindle attached.

2 Loosen the **outside** handle set screw. Remove the handle. Note how far the spindle goes into it. Insert the **new spindle** at the same distance, making sure the grooved side faces the set screw.

3 Install the outside handle with the new spindle into the door. Place the saved nylon washer on the new spindle.

4 Install the extension, then the **inside handle**. The grooved side of the new spindle should line up with the set screw.

5 Push both inside and outside handles together and tighten the set screw. Make sure the handles can turn freely but not loosely.