


Your Handle Type:

## Kwikset Spacer

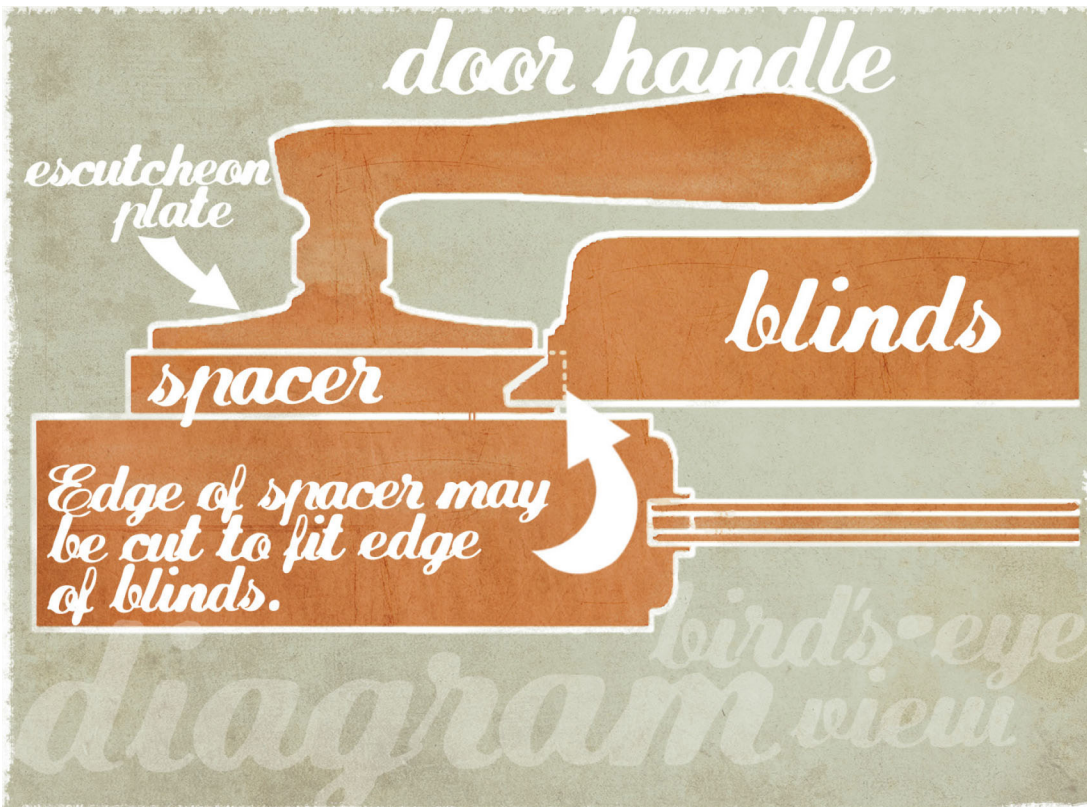

- 1** Before you begin, you may pre-finish the extension so that it matches the door.
- 2** Remove the existing door handle and escutcheon plate.
- 3** Pre-fit the extension and handle to make sure that everything works correctly after installation. Center the extension ring over the hole in the door left by the escutcheon plate. Now center the handle over the extension.
- 4** Reattach the escutcheon plate using the longer screws. Tighten the screws so that the handle is securely fastened to the door.
- 5** If the handle and extension need further securing, use two small nails to attach the extension to the door. However, make sure that you pre-drill the holes using a bit the same diameter as the nails. This will keep the extension from splitting.