

Your Handle Type:

# Kwikset Active



1

Because the set screw is reverse threaded, turn it **counter-clockwise** to loosen it. Remove the handle.



4

Slide on the extension. Line up the hole on the barrel of the extension with the set screw. If the set screw does not appear in the center of the hole, tap the end of the extension with a hammer until it does. Now turn the set screw **clockwise** until the extension is secure.




2

Insert a putty knife between the thumb-turn cap and the plastic base. **Push the putty knife handle toward the door. Do not pull up because this might break the cap.** If one putty knife doesn't pop the cap loose, use two putty knives from opposite sides. Always push the putty knife handles toward the door.



5

Install the thumb turn lock into the end of the extension. Be sure to push the lock into the thumb turn extension.

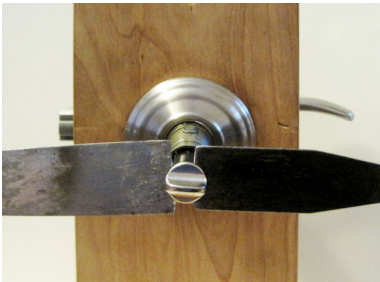

3

Insert the thumb turn extension until it snaps into place. Tap on it with a hammer if necessary.



6

If the thumb turn lock is too loose, pull it out. Wrap thin strips of tape around the end to ensure a better fit. Then push the thumb turn lock back into the extension piece.



7

Replace the door handle. Line up the hole in the handle over the extension set screw. Turn the screw counter-clockwise until tight. If the handle does not slide on completely, see if the set screw is catching.

